

DOMINATOR[®]



ADJUSTING FORCE MARGINS

NEXTGEN TECHNOLOGY

Select
Secure
Smart

DSO-1
DSO-2
DSO-3

FORCE SETTINGS

Safety Obstruction Force is calculated automatically during setup. Adjusting this is normally only necessitated by environmental conditions such as windy or dusty areas, and areas with extreme temperature changes.

Use the below table as a guide for Force Settings

PARAMETER		Value options = Indicated by brightness of main light (DEFAULT parameter underlined>)				
Name	Flashes	1	2	3	4	5
Medium	1	0.7A	0.9A	1.2A	1.5A	2.0A

Refer to the instruction manual for detailed instructions or call the technical help line on (03) 384 8136

The Safety Obstruction Force is calculated automatically during set-up. Use the following steps to customise this setting.

SELECT MARGIN ADJUSTMENT MODE

STEP ONE

Opener should have been commissioned before this step



Switch power on

STEP TWO



Press repeatedly until... flashing once every second

ADJUSTING FORCE MARGIN

STEP THREE



Press for 2 sec



ON



ON

STEP FOUR



To increase force

OR



To decrease force

Note: the brightness of the light indicates the force setting

PRESS STOP/SET AND COMPLETE A SAFETY TEST TO CONFIRM THE FORCE MARGIN